


Tank Filling Distributor

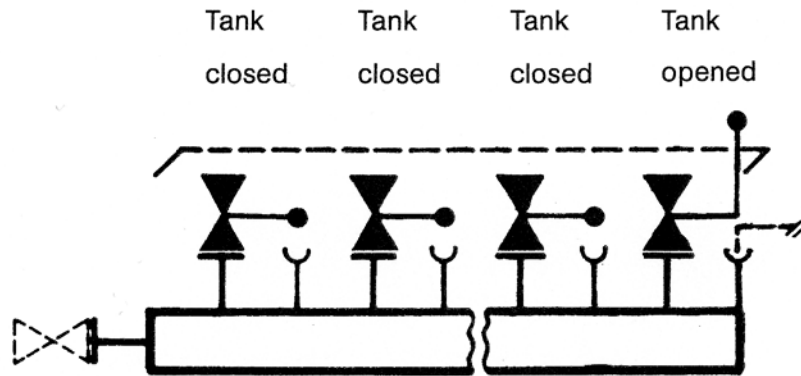

1. Move tank locking device so, that the valve for the tank to be filled can be opened.
2. Open flange ball valve cock of the tank to be filled.
3. Connect the limit value switch.
4. Fill the tank.
5. After the filling process remove the limit value switch.
6. Close ball valve cock.



Precautionary measures:

The tank locking device guarantees, that only one tank can be open at one time.

The limit value switch can only be connected to the open valve.

The filling distributor prevents erroneous filling.